



Ersatzteile - Spare parts - Pièces de rechange - Reserveonderdelen - Parti di ricambio - Reservedele - Reservdelar
 Varaosat - Części zamienne - Náhradní díly - Alkatrészek - Piese de schimb - Запасные части - 备件

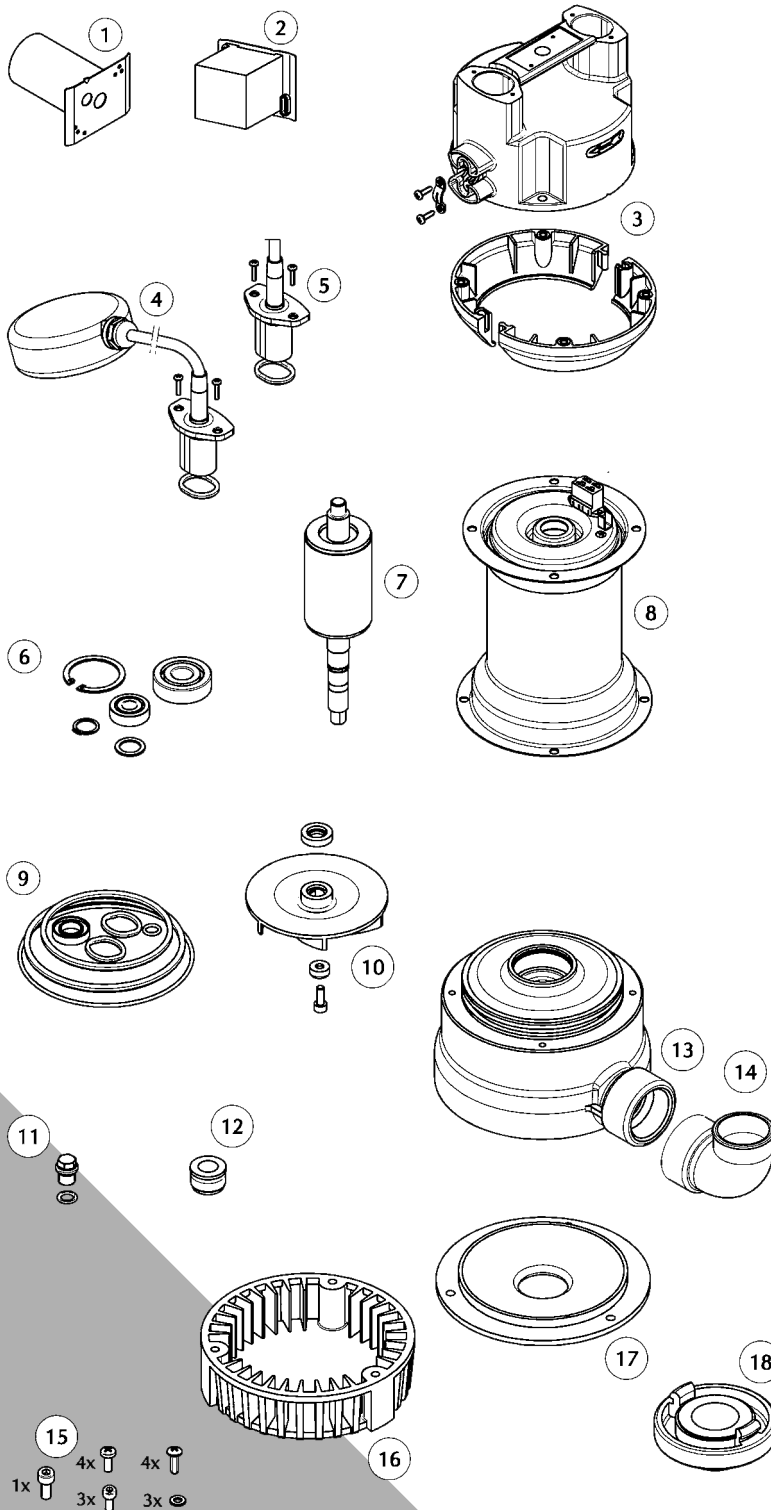

① Kondensator	Capacitor	
62		JP46015
102		JP46016
152		JP46017
② Schaltschütz	Contactora	JP46056
③ Haube	Top cover	JP46019
④ Tauchschalter	Float switch	
ES		JP46023
DS		JP46024
⑤ Leitung	Float	
62 ES, 102 ES		JP42777
62 DS, 102 DS		JP46012
152 ES		JP46013
152 DS		JP46014
c/w ANZ-plug		JP47221
⑥ Lagersatz	Bearing set	JP46042
⑦ Rotorwelle	Rotor shaft	
62 ES		JP46035
62 DS		JP46036
102 ES		JP46037
102 DS		JP46038
152 ES		JP46039
152 DS		JP46040
⑧ Stator + Gehäuse	Stator + Housing	
62 ES		JP46027
62 DS		JP46028
102 ES		JP46029
102 DS		JP46030
152 ES		JP46031
152 DS		JP46032
⑨ Dichtungssatz	Seal set	JP46041
⑩ Laufrad	Impeller	
62		JP46052
102		JP46053
152 ES		JP46054
152 DS		JP46055
⑪ Ölschraube	Oil screw	JP46046
⑫ Gleitringdichtung	Mechanical seal	JP46043
⑬ Pumpengehäuse	Pump casing	JP46044
⑭ Winkel	Elbow	JP45953
⑮ Schraubensatz	Screw set	JP46263
⑯ Siebfuß	Strainer base	JP46048
⑰ Deckel	Cover	JP46050
⑱ C-Kupplung	C coupling	JP44770
⑲ 1l Öl	1l Oil	JP48236

UB 251 DS

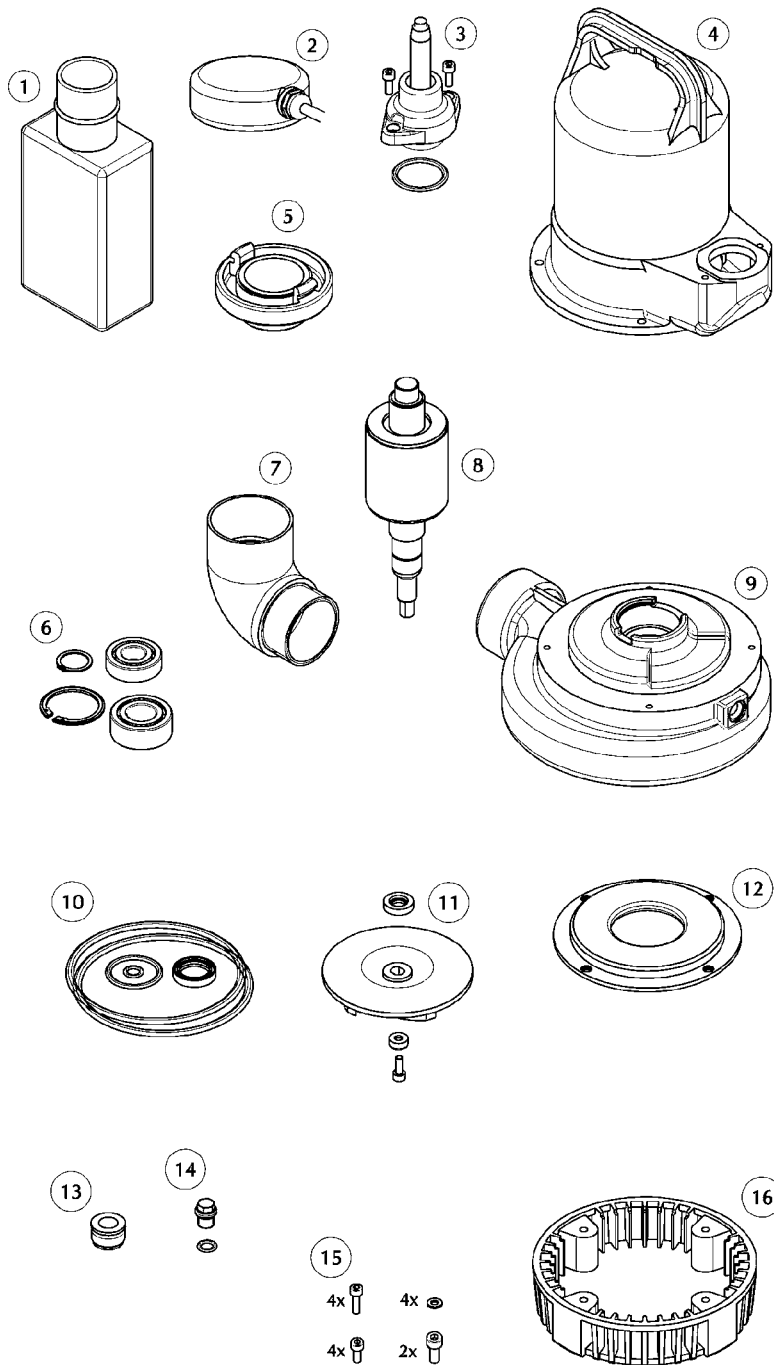

①	CEE Motorschutz	CEE plug	JP44751
②	Tauchschalter	Float switch	JP46266
③	Leitung	Float	JP46259
④	Stator + Gehäuse	Stator + Housing	JP46268
⑤	C-Kupplung	C coupling	JP44853
⑥	Lagersatz	Bearing set	JP46269
⑦	Winkel	Elbow	JP44771
⑧	Rotorwelle	Rotor shaft	JP46270
⑨	Pumpengehäuse	Pump casing	JP46277
⑩	Dichtungssatz	Seal set	JP46272
⑪	Laufrad	Impeller	JP46275
⑫	Schleißplatte	Wear plate	JP46273
⑬	Gleitringdichtung	Mechanical seal	JP46043
⑭	Ölschraube	Oil screw	JP46046
⑮	Schraubensatz	Screw set	JP46011
⑯	Siebfuß	Strainer base	JP46276
⑰	1l Öl	1l Oil	JP48236